

Alumina Modular Series 2, 3, 4, 6







BEFORE YOU BEGIN

Read these instructions completely and carefully.

WARNING/AVERTISSEMENT

RISK OF ELECTRIC SHOCK

Turn power off before inspection, installation or removal.Properly ground electrical enclosure.

RISK OF ELECTRIC SHOCK

- Follow all NEC and local codes.
- Use only UL approved wire for input/output connections. Minimum size 18 AWG (0.75mm²).

RISQUES DE DÉCHARGES ÉLECTRIQUES

- Coupez l'alimentation avant d'inspecter, installer ou déplacer le luminaire.
- Assurez-vous de correctement mettre à la terre le boîtier d'alimentation électrique.

RISQUES D' INCENDIE

- Respectez tous les codes NEC et codes locaux.
- N'utilisez que des fils approuvés par UL pour les entrées/sorties de connexion. Taille minimum 18 AWG (0.75mm²).

Save These Instructions

These instructions do not purport to cover all details or variations in components nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problem arise which are not covered sufficiently for the purchaser's purpose, the matter should be referred to GE Current, a Daintree company.

Current does not claim liability for any installation not performed according to this guide or not by a qualified electrician.

Prepare Electrical Wiring



Electrical Requirements

The LED luminaire must be connected to the mains supply according to its ratings on the product label.



Housing(s)


Grounding Instructions

The grounding and bonding of the overall system shall be done in accordance to local electric code of the country where the luminaire is installed.

For Your Safety

- Installation to be performed by factory trained or qualified personnel. Ensure this manual is provided to the installers and users.
- Use this product only in the manner intended by the manufacturer. If there are any questions or concerns, contact the manufacturer.

Included Parts & Hardware

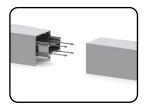




Corners (Optional)







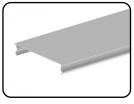


Lens




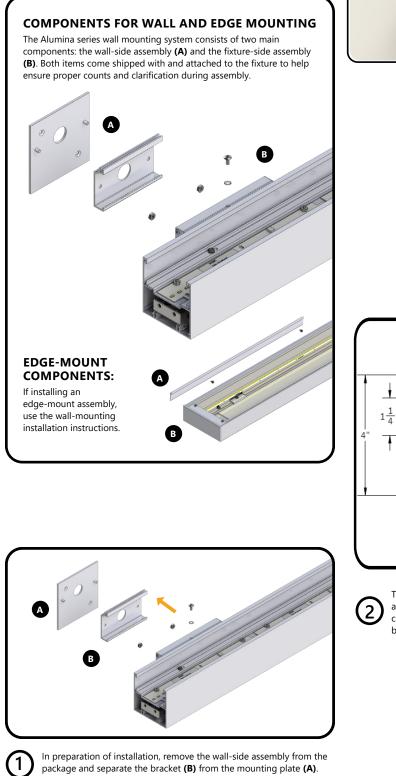

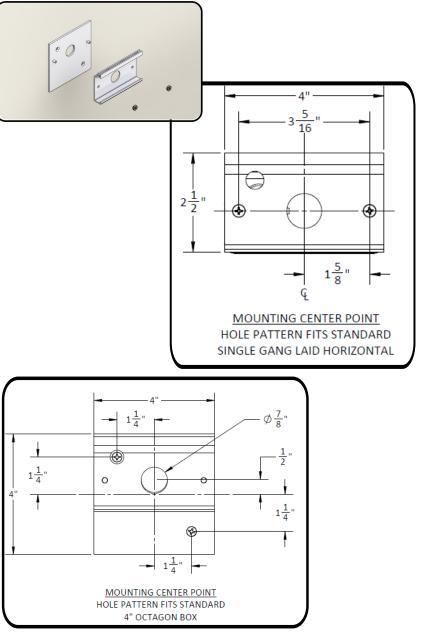


The wall mounting system can be used with a standard 4in octagonal box. As well as a single gang box laid horizontally for a more concealed look. Mount the proper cover plate for your specific installation to the wall. All mounting locations must be to building structure.

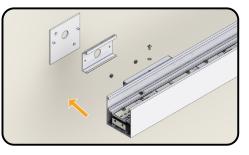

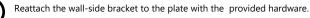


3

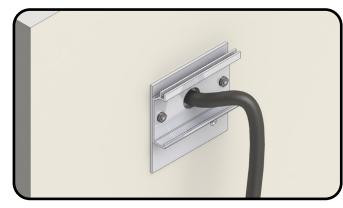




5


With wall-side brackets installed, pull the power feed wiring through the middle opening of the first fixture.

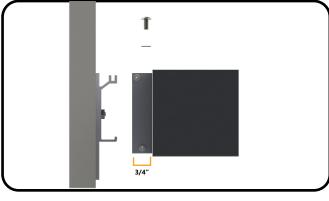



The fixture-side bracket engages with a hook-and-pivoting motion. With the fixture raised and in the **(A)** position, feed the wiring into the fixture housing and lower/rotate the mating pieces into position **(B)**.


WALL-MOUNT

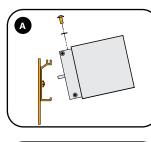


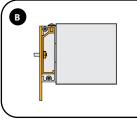

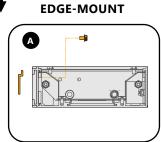

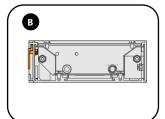

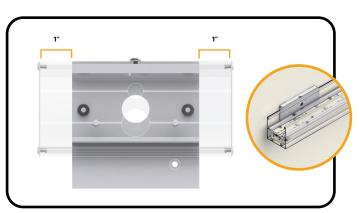

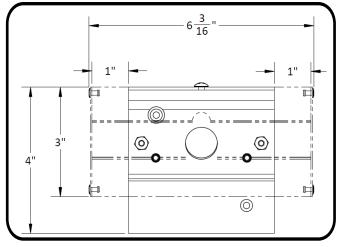





The extended length of the fixture-side bracket allows for as much as 1" of alignment left or right. Once the fixture is in the desired position, lock it in to place with the provided hardware on the top of the mounting bracket.

For continuous run/pattern installations: after first fixture has been installed, repeat steps 1, 2, 3 and 5 for each subsequent fixture.

Proceed with **Housing & Run Assembly Installation** and **Wiring Instructions**. Finally, complete the installation by reinstalling the reflectors and lenses.

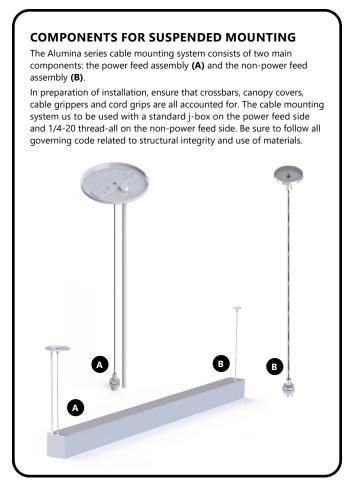

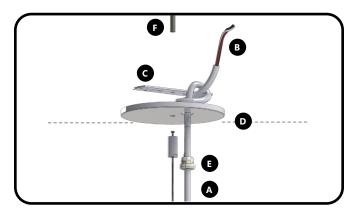


1

Turn off the power to the fixture's circuit. With the first power-fed fixture supported in the air, raise the cable assemblies to their respective mounts, and connect the power cord (A) to the ceiling's power feed (B). Install the junction box cross bar (C) in the power feed side. The suspension cable assembly threads to the 1/4-20 stud (F) in the cross bar. Be sure that the included SJ cord is laced through the 5" canopy cover (D) and secured by the cord grip (E). Follow governing electrical code for making your connections in the junction box. Number of conductors in the cable will vary with fixture specification.






Thread the non-power feed side cable onto the 1/4-20 threaded rod (not shown, by others) secured to structure. Be sure that the 2" canopy cover is in place before attaching.

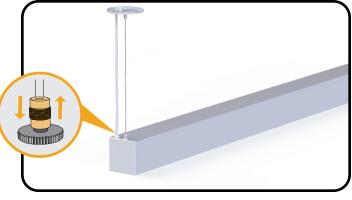




With fixture now mounted, you can slowly lower it into place. Fine adjustments to height and leveling can be made at the gripper assemblies located on the upper surface of the fixture. Trim excess cable below gripper, inside fixture.

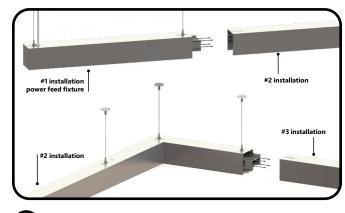



4 corner

For continuous run/pattern installations: after first power-fed fixture has been installed, repeat step 2 for each subsequent fixture and

Proceed with Housing & Run Assembly Installation and Wiring Instructions. Finally, complete the installation by reinstalling the reflectors and lenses.

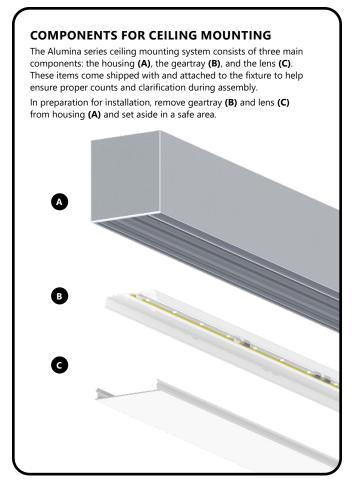


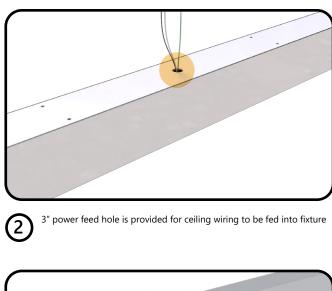

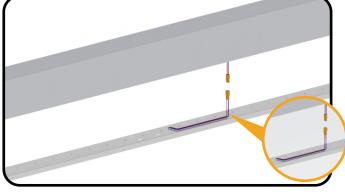


Connect geartray to driver inside fixture housing via provided

electrical disconnect and re-insert geartray back into housing.

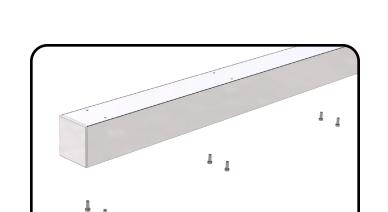

Turn off the power to the fixture's circuit.

Align fixture housing flush to ceiling and secure through factory-drilled holes using screws (not provided) appropriate for ceiling type.

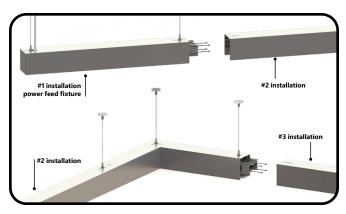





3

For continuous run/pattern installations: after first power-fed fixture has been installed, repeat step 2 for each subsequent fixture and corner.

Proceed with **Housing & Run Assembly Installation** and **Wiring Instructions**. Finally, complete the installation by reinstalling the reflectors and lenses.

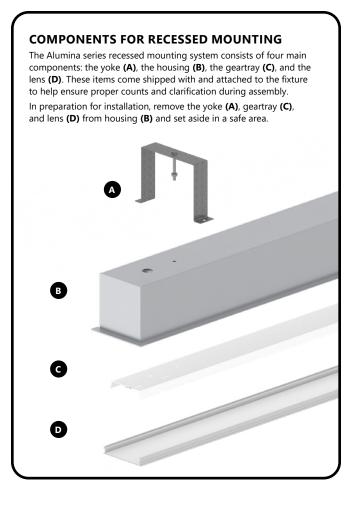


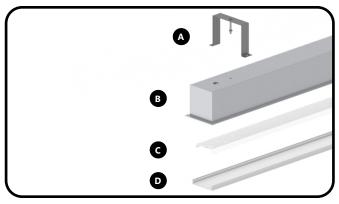




2

In preparation for installation, remove the yoke (A), geartray (C), and lens (D) from housing (B) and set aside in a safe area.

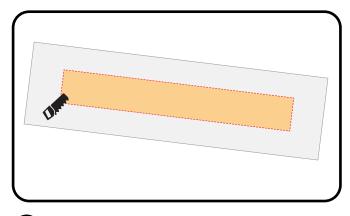


Be sure that the power to the fixture's circuit is turned off. Prior to cutting into drywall, locate all power conduits and cables. Make an opening in the drywall following the dimensions in chart below.

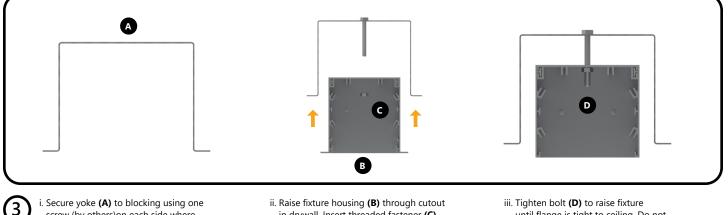

screw (by others)on each side where marked.

in drywall. Insert threaded fastener (C) into hole in housing.

until flange is tight to ceiling. Do not overtightened as to distort housing.

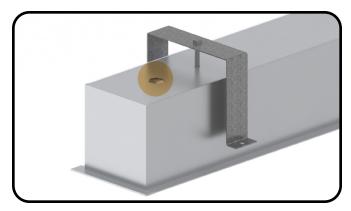




Connect wiring through standard 7/8" wire feed hole.

F Profile Hole Opening Charts

NOMINAL	LENGTH
2'	24 3/4"
3'	36 3/4"
4'	48 3/4"
5′	60 3/4"
6'	72 3/4″
7′	84 3/4"
8'	96 3/4"
9'	108 3/4"
10'	120 3/4"
11'	132 3/4"
12'	144 3/4"
X	X' + 1/4"


PROFILE	WIDTH
SAR-32	2 5/8"
SAR-33	3 3/16″
SAR-34	4 3/4"
SAR-36	6 1/4"

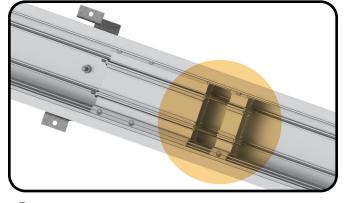




For continuous run/pattern installations: after first fixture has been installed, repeat steps 1 and 3 for each subsequent fixture. Proceed with Housing & Run Assembly Installation and Wiring Instructions at the end of this document. Finally, complete the installation by reinstalling the geartray and lenses.

Housing & Run Assembly Installation

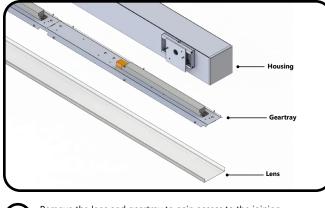

Remove the lens and geartray to gain access to the joining hardware at the fixture ends of each run configuration

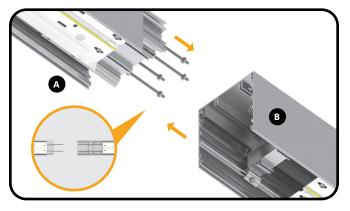




1


Slide the fixtures together along the alignment tabs **(A)** to engage the housing profile of the adjoining units **(B)**. Use the included gasket strips along the exposed faces for a true fit and to prevent light leak. Tighten set screws in alignment tabs.

Wiring & Lamping prior to wiring, fixture(s) must be mounted/hung and adjoined in the final installed position.

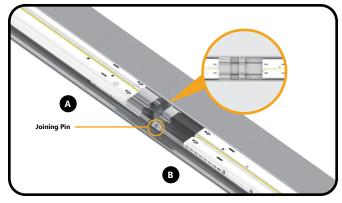




Attach the housings (A & B) by using the supplied hardware in the header brackets to draw the pieces together tightly. Set screws in the alignment tabs aid this as well. Repeat steps 1–3 for continuous run/ pattern installation, including corners.

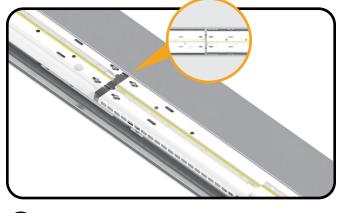



Caulk between housing seams as necessary to prevent light leak.

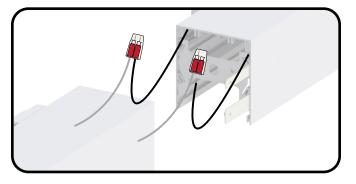


ADDITIONAL OPTIONS

Product Code	Description	Manufacturer
[none]	Non-Dimming	Universal Lighting Technologies
D10V	0-10V Dimming	Universal Lighting Technologies
DLA2	Lutron Hi-Lume 1% 2-wire LED driver	Lutron
DLEH5	Lutron EcoSystem H-Series 5-wire Dimming	Lutron
DLE55	Lutron EcoSystem 5-wire Dimming	Lutron

Standard geartrays come wired with 18GA solid core wire and provided self drilling hardware.

Lens Field Cut Instructions

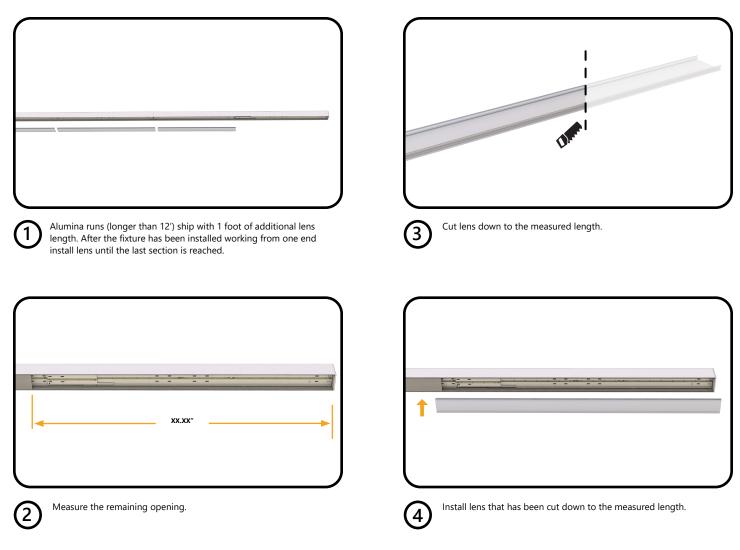

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAN ICES-005 (A) / NMB-005 (A)

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.



www.gecurrent.com

© 2021 Current Lighting Solutions, LLC. All rights reserved. GE and the GE monogram are trademarks of the General Electric Company and are used under license. Information provided is subject to change without notice. All values are design or typical values when measured under laboratory conditions.

IND716 (Rev 01/28/2022)